



**KING OF PRUSSIA VOLUNTEER FIRE COMPANY**  
**170 ALLENDALE ROAD**  
**KING OF PRUSSIA, PENNSYLVANIA 19406**  
610-265-1063 Allendale Road Station  
610-337-8230 West Beidler Road Station  
610-265-3205 FAX  
610-265-5635 Social Hall  
email [kpvc@pond.com](mailto:kpvc@pond.com)  
Web [www.kpvfc.com](http://www.kpvfc.com)

## Standard Operating Guidelines

**SOG NO.:** KP-2-0002  
**SOG TITLE:** USE OF AIR CASCADE  
**ADOPTION DATE:** 01/92  
**REVISION DATE:** 01/01  
**NO. OF PAGES:** 1

**Purpose:** To establish polices and guidelines governing the use of the Air Cascade/Fill Station at the King of Prussia Volunteer Fire Company.

The use of the Air Cascade /Fill Station in the King of Prussia Volunteer Fire Station shall be restricted to those people trained in its use only. This training shall be conducted by the SCBA Coordinator, and a list of those people qualified to use the system shall be submitted to the Fire Chief and posted in the Air Cascade Room.

Accurate records shall be kept by the Person filling air bottles, in the notebook provided. There shall be no more than two people at any one time in the Air Cascade Room during filling operations.

If the Air Cascade is low on air, the SCBA Coordinator shall be notified immediately, and he/she will make arrangement for the Air Cascade to be filled by Station 49 or other agency.

Any problems with the Air Cascade/Fill Station shall be reported to the SCBA Coordinator and the Fire Chief immediately. Due to the dangerous nature of this equipment, unauthorized use of the system shall result in the immediate expulsion from the Fire Company.

The SCBA Coordinator or his/her designated person shall check all SCBA apparatus on a regular (bi-weekly) basis to assure operational readiness.